

# Saarinen Small Round Tables

## Marble

### 3 Installers Required

172TR – 35" Round

166TR – 36" Round

167TR – 42" Round

173TR – 42" Round


176TR – 47" Round



## Saarinen Small Round Tables, Marble

### Hardware

(3) M8 X 16MM slotted machine screws  
*\*included in base carton*

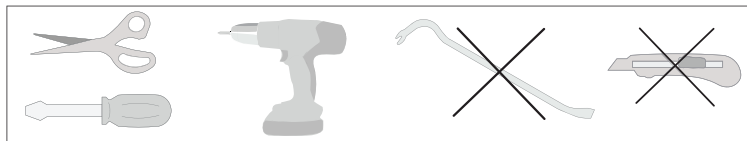

### Tools

Scissors

Slotted screwdriver

Driver *(for use on marble crate only)*

T20 torx bit

**CAUTION:** DO NOT REPLACE SCISSORS WITH AN X-ACTO KNIFE AS SCRATCHES CAN OCCUR


### Unpacking top and base cartons

**CAUTION:** ALWAYS EMPLOY SAFE ERGONOMIC PRACTICE WHEN LIFTING OR MOVING HEAVY OBJECTS. ILLUSTRATIONS ARE FOR **REFERENCE ONLY** AND DO NOT NECESSARILY PORTRAY SUCH PRACTICE.

**A MINIMUM OF (3) INSTALLERS ARE REQUIRED FOR PROPER TABLE ASSEMBLY. ALL MARBLE TOPS MUST REMAIN IN CRATE UNTIL DELIVERY AT INSTALLATION SITE. TOP SHOULD REMAIN IN A VERTICAL POSITION DURING STORAGE AND TRANSPORT.**

**BE SURE TO ASSEMBLE THE TABLE IN THE DESIRED SPACE IT WILL BE USED IN; AVOID MOVING THE TABLE ONCE TOP AND BASE HAVE BEEN ASSEMBLED.**

1. The dining table will arrive in two packages: a wooden crate containing the marble top and a box containing the base and hardware. Begin by unpacking the base carton. Using scissors, open the box and carefully remove the table base and bag of hardware, set aside.
2. Begin breaking down the marble crate. Two installers hold crate frame stable while one installer uses driver to remove the four corner screws and the crate face.

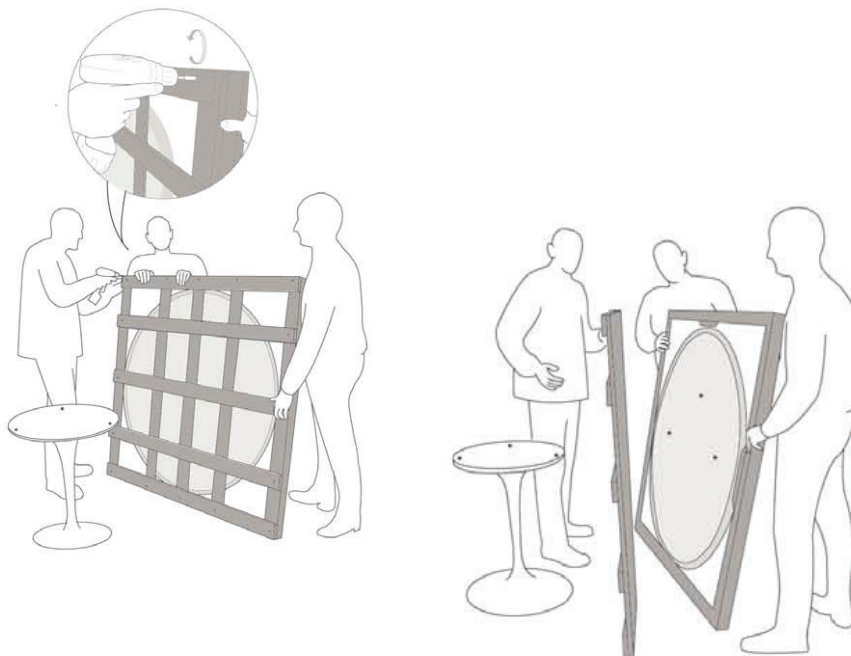


## Saarinen Small Round Tables, Marble

### Screwing the top and base together

3. While one installer holds the crate frame stable, the other two installers carefully lift the marble top out of the crate and onto the table base. Be sure to line up the three predrilled holes on the subtop to the inserts on the underside of the marble top.
4. Using a slotted screwdriver, screw the (3) M8 X 16MM screws into the marble top from beneath the subtop until they make contact and then tighten an additional  $\frac{1}{4}$  turn.

**CAUTION:** OVERTIGHTENING CAN CAUSE DAMAGE; ALWAYS USE A SCREWDRIVER NOT A DRIVER OR POWER DRILL

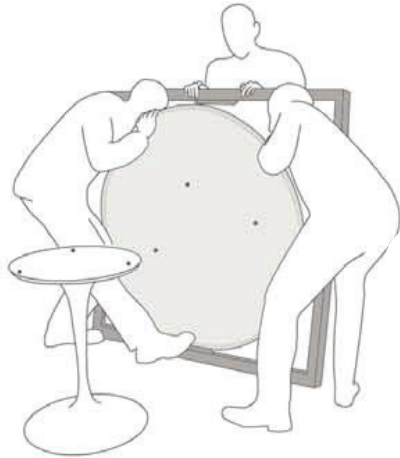

### Moving the table

5. Never move the table by the top only. The table should be assembled in its final location. If the table's position must be adjusted slightly, you may carefully move it a few inches by grasping the stem of the base and sliding the table into the desired position. If the table needs to be moved any distance greater than a few inches, the table must be disassembled.

