

Morrison Desk

Customer Service:

1.800.944.2233 inside the U.S.

1.203.614.0600 outside the U.S.



For care instructions, please visit dwr.com/learn.

 


Morrison Desk


READ BEFORE BEGINNING ASSEMBLY:

Please identify all parts and have the required hardware before you begin. Read all instructions before assembly. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a clean and flat soft surface to prevent scratching during assembly. Tighten all components securely before use. **DO NOT** use this product if any parts are missing or broken. **DO NOT** substitute parts. Check parts and hardware periodically for tightness and positioning. If replacement components and additional instructions are needed, or if you have any questions, contact customer service. Failure to follow these warnings and assembly instructions could result in serious injury or property damage.


HARDWARE LIST

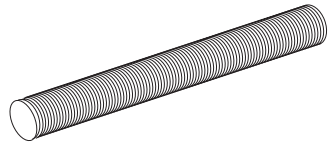


Long bolt x 8

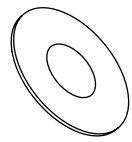 

Washer x 8

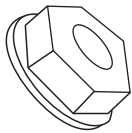 


Nut x 8

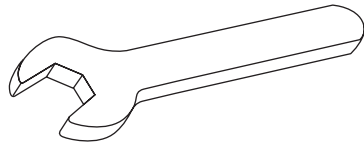 


Wrench

 PARTS LIST

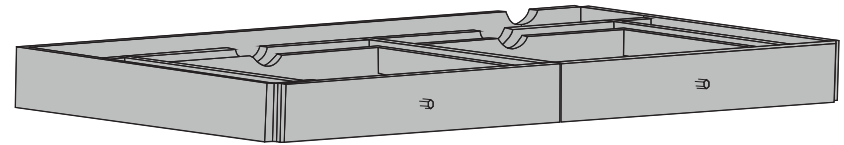


Desktop x 1

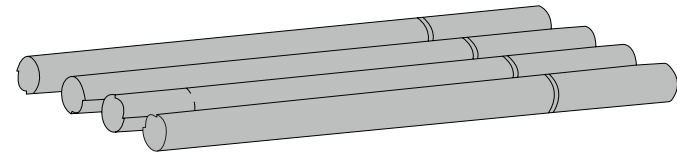 

Leg x 4


Legs are labeled
FL: front left | FR: front right
BL: back left | BR: back right

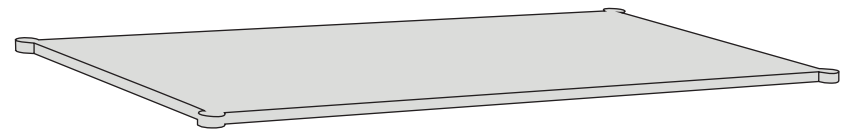 


Marble top x 1

Morrison Desk

 
1. Screw two threaded rods into each of the four legs.

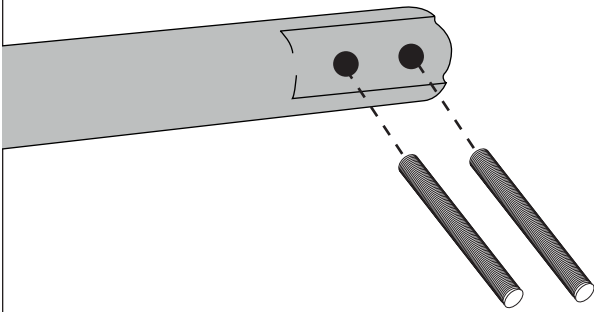

 
2. On a soft surface, turn table on its side brass hardware facing up. Align FL and FR legs with predrilled holes at tabletop corners, being sure to face threaded bolts on legs to the inside.

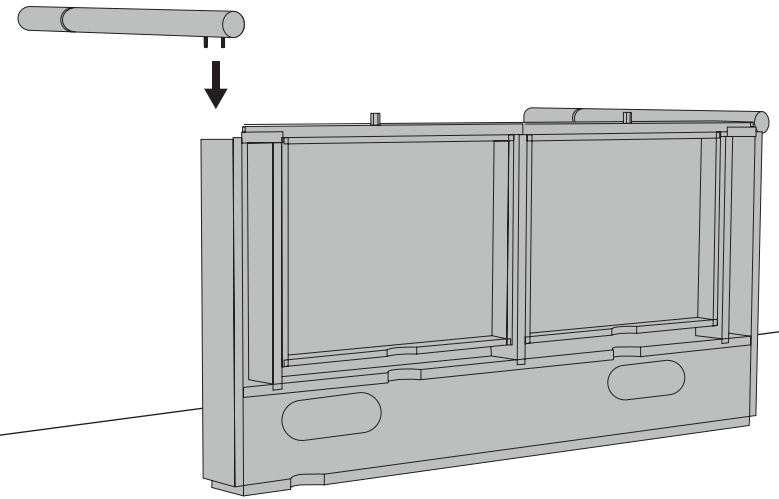

 3. Thread washer and bolt onto each leg, as shown, and tighten loosely. Using wrench, tighten nuts until nearly snug. Ensure wide end of each nut is facing washer.

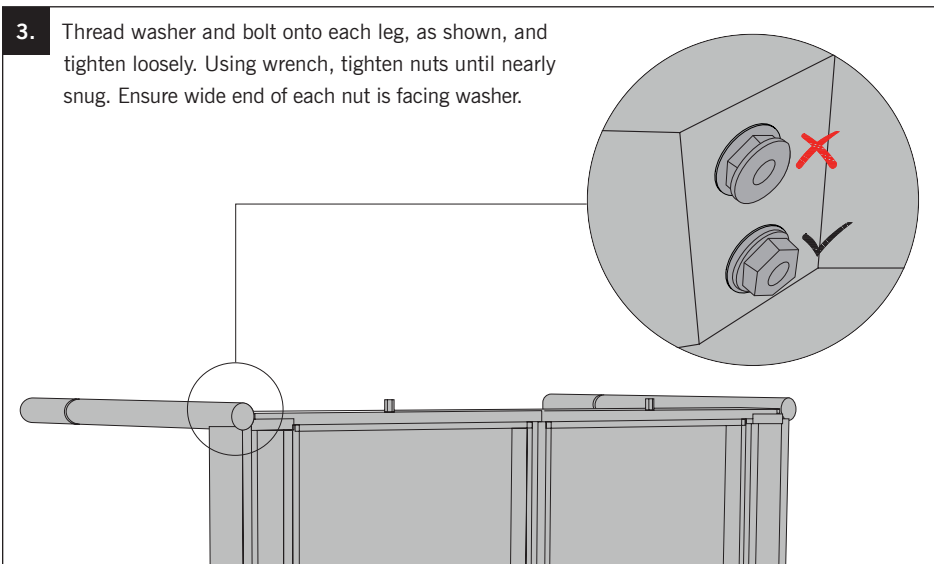


4. Carefully flip table upright on front legs. Have a second person help by holding table upright while back legs are attached. Repeat step 3 on back legs.

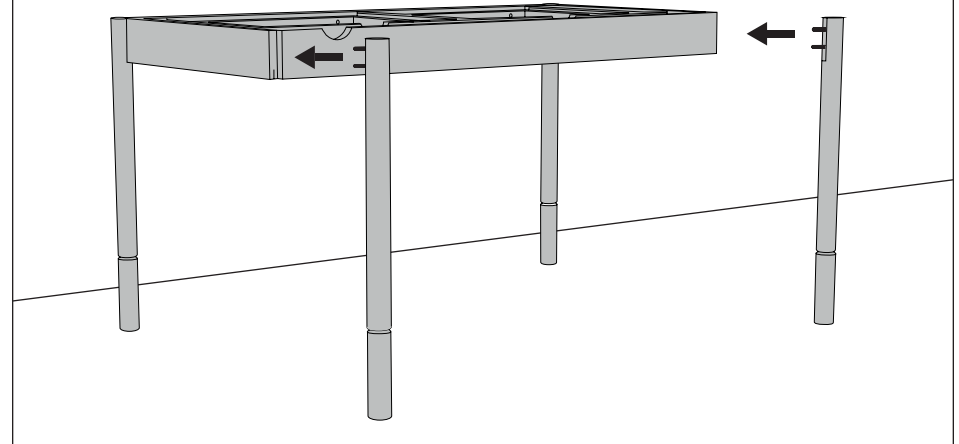


Morrison Desk

PLEASE NOTE:


Stone top is especially subject to breaking if carried in a flat orientation. When moving, always make sure to tip vertically and handle with extraordinary care. When setting top down, lay flat on a padded surface – do not lean against another object. Stone top has locator blocks on underside that must be properly aligned with base, as shown.

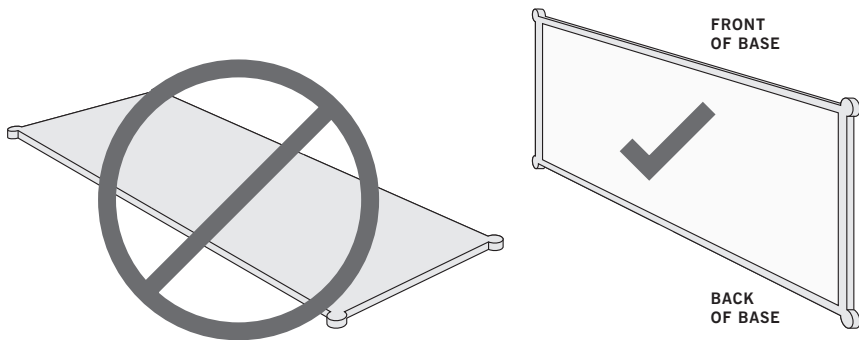

 5. Unpack stone top and raise to approximate position over cabinet base. Gently lower one end, aligning stone “ears” of top with cabinet legs. Then lower opposite end, being careful not to drop abruptly and to keep fingers clear.

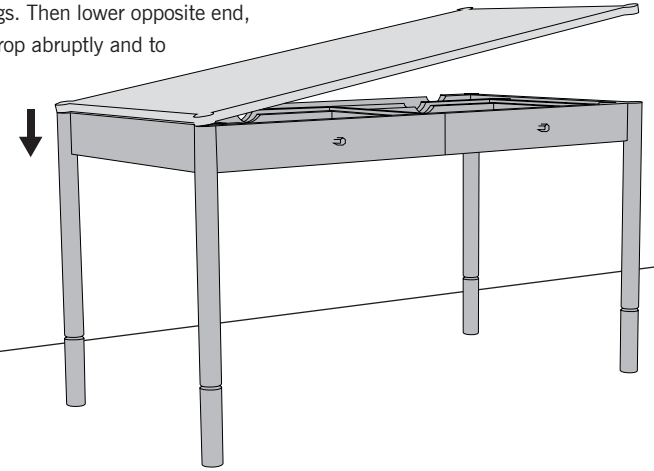

6. Once desk is fully assembled assess if it's level, and adjust leveling glides as needed.

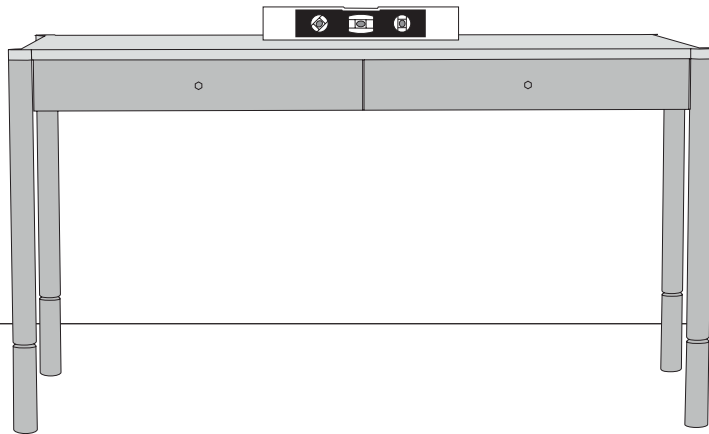

Morrison Desk

Drawer Adjustments



 
Drawer Underside

HOW TO RELEASE DRAWER SLIDES

Squeeze both handles at front underside of drawer, and firmly pull drawer forward.

HOW TO REINSTALL DRAWER

Fully extend drawer slides, and place drawer box on top of slides. Pull each drawer slide forward until it locks into both left and right side clips. You will hear a “click” when slide is locked properly.

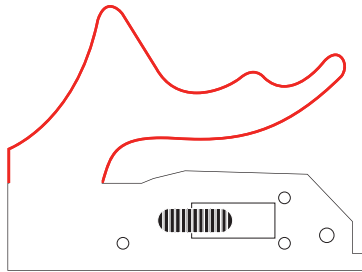

HOW TO ADJUST DRAWER FACE

Drawer faces can be leveled by sliding small adjustment knob forward and back or side to side. Each knob adjusts a single corresponding side of drawer face.

