

# SEN

## credenza

TR≡KU

### Maintenance instructions

#### 1 Levelling

In each furniture to avoid problems of adjustments as well as of closing doors and drawers, it is very important it to be well leveled, for which is advisable to use a level **Drawing 1**.

The SEND CREDENZA can be leveled from the metallic leg base, screwing or unscrewing the bottom piece **Drawing 2**.

#### 2 If the doors don't open or close correctly

1\_ Adjust the push. **Drawing 3**

2\_ Level the door from the hinges see **Drawing 4**

#### 3 If the doors are out of adjustment

1\_ Level the door from the hinges see **Drawing 4**


#### 4 If the drawers are out of adjustment

1\_ First, slightly lift the drawer for easy access to the small washer underneath. Then turn the washer to level the drawer up or down (see drawing). Do the same operation on both sides of the drawer. **Drawing 5**

2\_ Could be that due a sudden hit the drawer came out of its place. In this case, first lift the drawer and remove it completely from its tracks, then replace the drawer making sure that the metallic flange in the back of the tracks is inserted in the drawer's opening as shown in the **Drawing 6**

#### 5 Cleaning

For cleaning use a cloth moistened with water. Do not use solvents or cleaning products. Avoid placing penetrating liquids: essential oils, perfumes, on top of the furniture

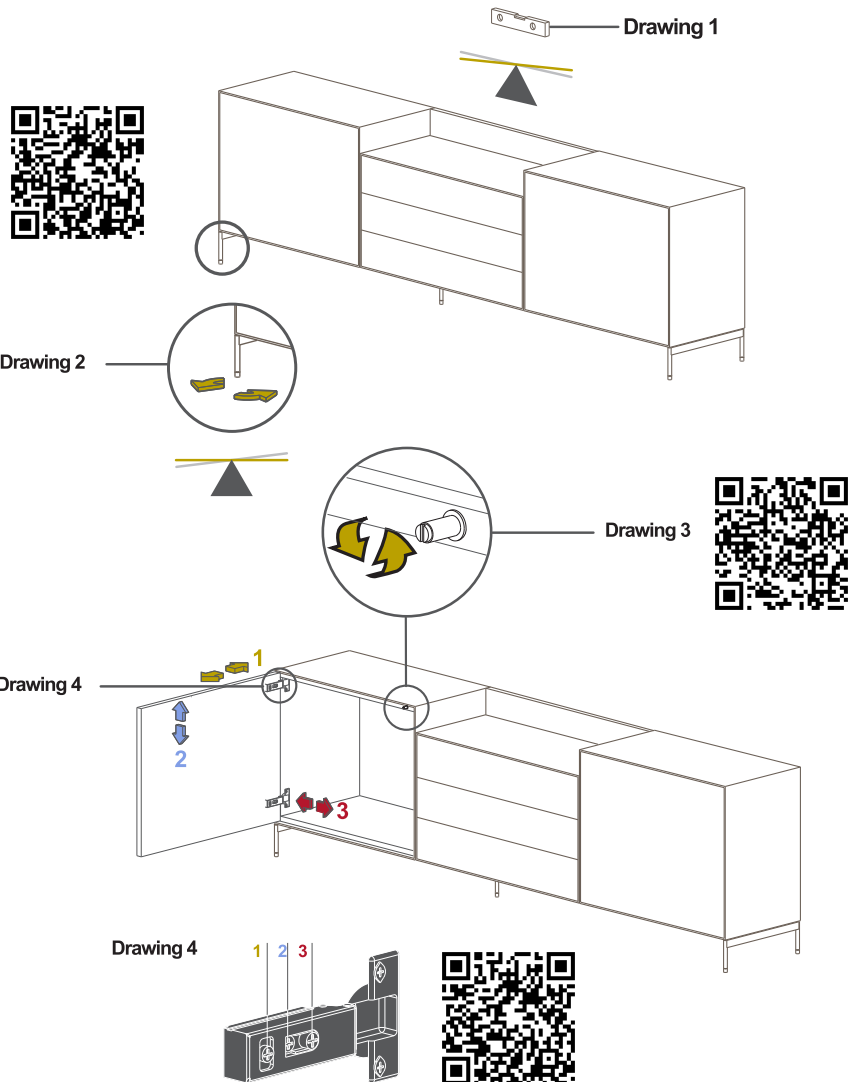

screw **1**: horizontal adjustment  
screw **2**: vertical adjustment  
screw **3**: depth adjustment

