

SEN

media unit

Maintenance instructions

1 Levelling

In each furniture to avoid problems of adjustments as well as of closing doors and drawers, it is very important it to be well leveled, for which is advisable to use a level **Drawing 1**.

The SEND MEDIA UNIT can be leveled from the metallic leg base, screwing or unscrewing the bottom piece **Drawing 2**.

2 If the doors don't open or close correctly

1_ Adjust the push. **Drawing 3**

2_ Level the door from the hinges see **Drawing 4**
For swinging doors see **Drawing 5**

3 If the doors are out of adjustment

1_ Level the door from the hinges see **Drawing 4**
For swinging doors see **Drawing 5**

4 Cleaning

For cleaning use a cloth moistened with water. Do not use solvents or cleaning products. Avoid placing penetrating liquids: essential oils, perfumes, on top of the furniture

