


## Palm Headboard Assembly

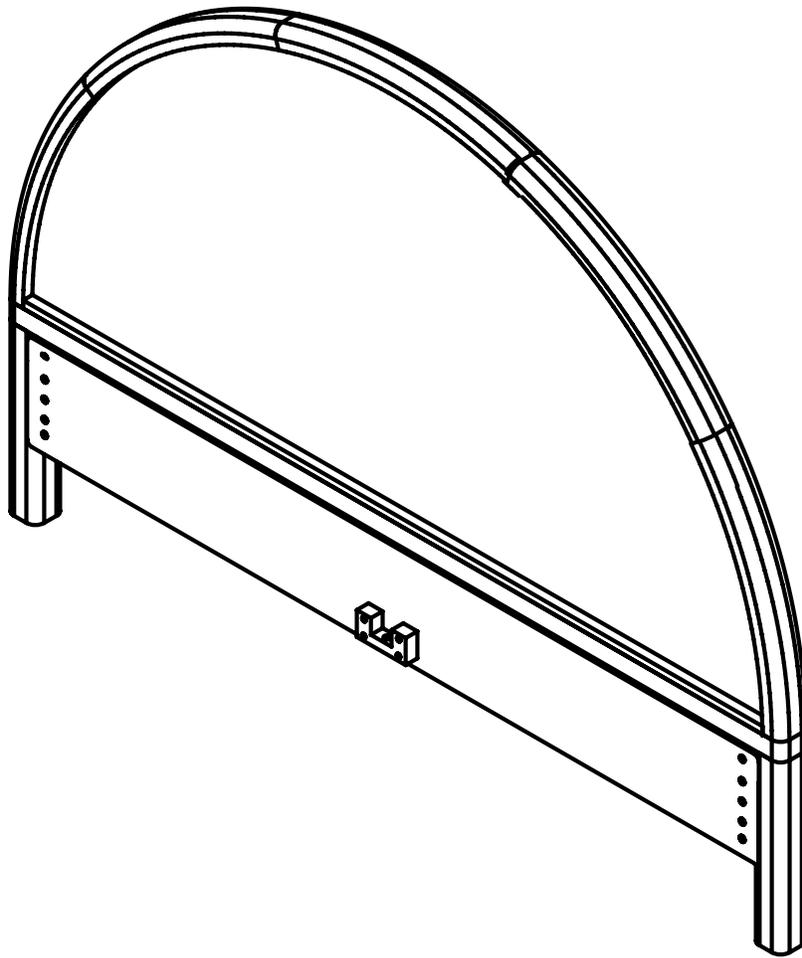

When Using Your Own Frame:

- You may need to remove the U-bracket from the headboard. See page 3.
- You may require a modi-plate. See page 3.
- The headboard must rest against the wall during and after frame assembly for added support.

Customer Service:

1.800.944.2233 inside the U.S.  
1.203.614.0600 outside the U.S.


For care instructions, please visit  
[dwr.com/learn](http://dwr.com/learn).

# Palm Headboard Assembly

## READ BEFORE BEGINNING ASSEMBLY

Please identify all parts and have the required hardware before you begin. Read all instructions before assembly. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a clean and flat soft surface to prevent scratching during assembly. Tighten all components securely before use. DO NOT use this product if any parts are missing or broken. DO NOT substitute parts. Check parts and hardware periodically for tightness and positioning. If replacement components and additional instructions are needed, or if you have any questions, contact customer service. Failure to follow these warnings and assembly instructions could result in serious injury or death.

## Parts List

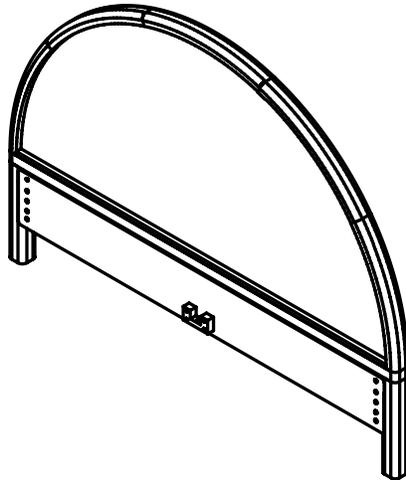


48" Palm Headboard x 1  
Twin, Full, Queen, or King




Optional Felts for  
Footboard Legs

## Hardware List

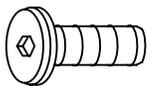


Short Bolt x 6  
1/4" dia  
3/4" length

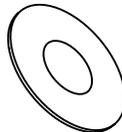


Large Flat Washer x 6  
1/4" inside dia  
3/4" outside dia



Spring Washer x 6  
1/4" inside diameter  
1/2" outside diameter

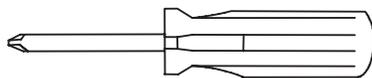

Optional Tool

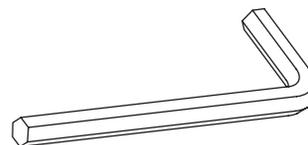

Allen Wrench x 1

# Palm Headboard Assembly

Check these dimensions to see if this headboard will fit your frame.

(A) Distance from floor to mounting holes

(B) Mounting hole spacing

Twin 37.6"


Full 52.2"

Queen 58.5"

King 74.6"

(C) Leg dimensions

W 2.5" D 2.5" H 4.5"

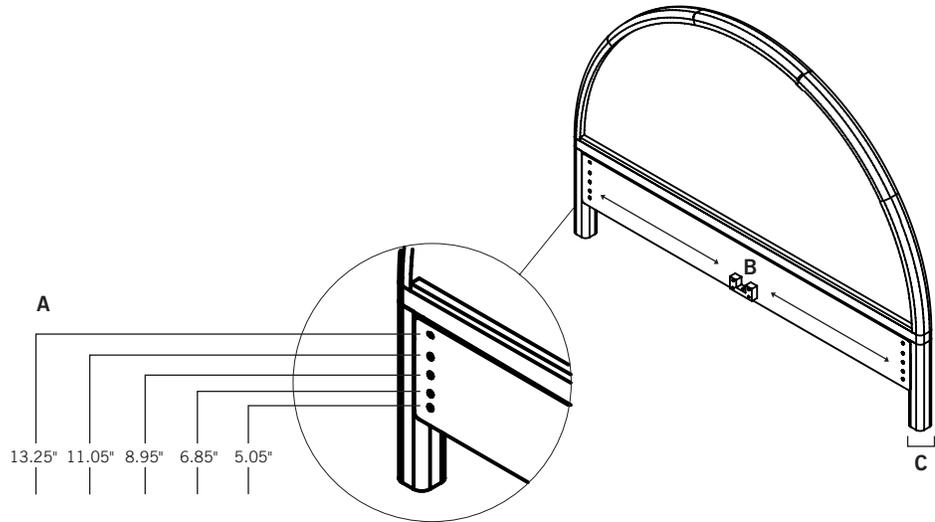

If pairing a DWR Headboard with your own frame, please reference hardware sizes, hole spacing guides, and leg heights to determine compatibility. Attachment to any frame other than a coordinating DWR platform frame may require a modi-plate.

We recommend having a second person hold headboard while it rests against destination wall during assembly. Headboard should remain resting against wall after assembly for support.

U-bracket on headboard (excluded from twin size) may need to be removed to work with your own frame. To do this, use a Phillips screwdriver.

